



#1 Open the valve

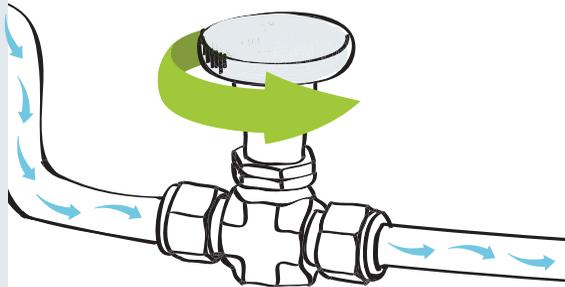

#3 Detect for stem leakage



#5 Tighten the packing nut

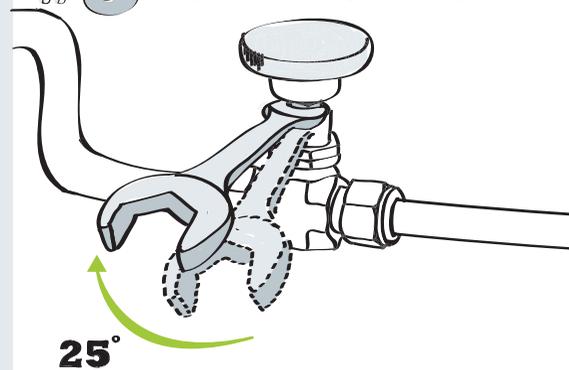


#7 No stem leakage




ok




#2 Increase pressure

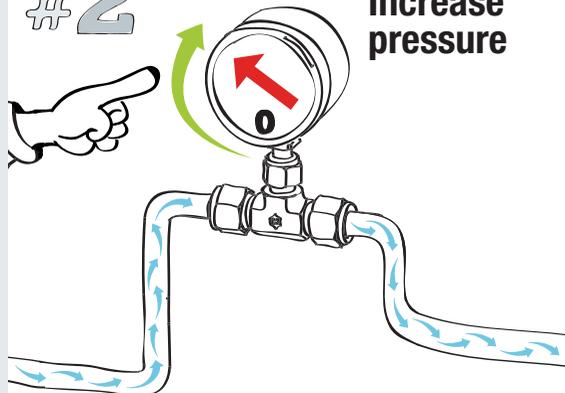


#4 Decrease pressure

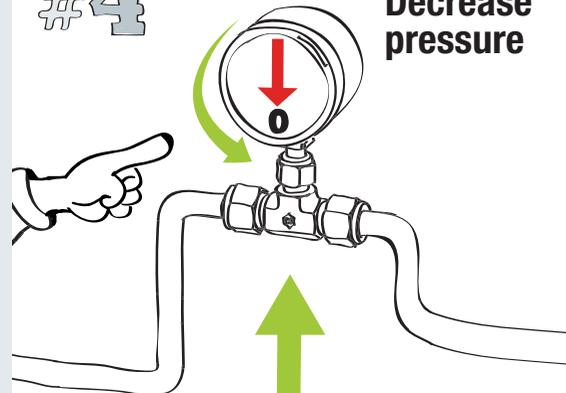

#6 Increase pressure

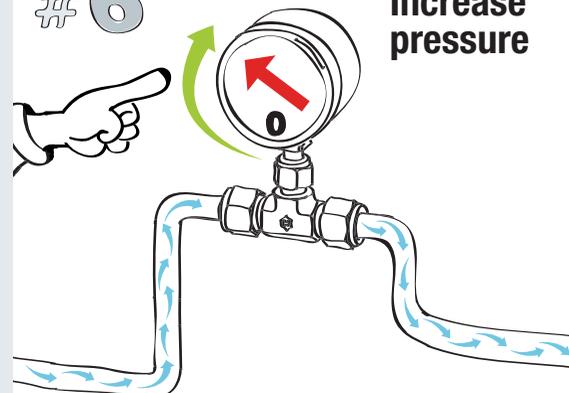

#8 If still leak, go to #4

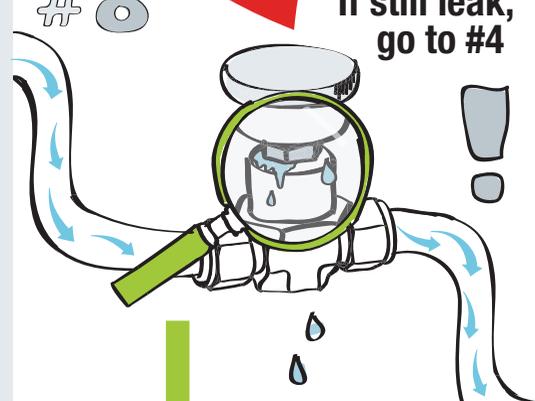

Scan for further assistant

